



ICT 88 Expansion Overview

Basic Configuration

ICT88 Default	Channels	Trunk Connections	ISDN Extensions	Analogue Extensions
4 x S0 ports	8	4/0	0/4	0
8 x a/b ports	8	0	0	8

Expansion Options

	Channels	SIP Trunks	Trunk Connections	Digital Extn	Analogue Extn	VoIP/SIP Extn
2S0 ISDN trunk/digital extension card	4	0	2/0	0/4	0	0
4S0 ISDN trunk/digital extension card	8	0	2/0	0/8	0	0
4 analogue extension card	4	0	0	0	4	0
8 analogue extension card	8	0	0	0	8	0
4Up0 2 wire digital extension card	4	0	0	4	0	0
8Up0 2 wire digital extension card	8	0	0	8	0	0
Analogue Trunk Card 2 Lines (POTS)	2	0	2	0	0	0
Analogue Trunk Card 4 Lines (POTS)	4	0	4	0	0	0
VoIP Gateway	N/A	N/A	N/A	N/A	N/A	40
4DSP*	4	4	4	0	0	N/A
8DSP*	8	8	8	0	0	N/A
Maximum Expansion	32	8	8	24*	24	40